



ENVIROMUX-VSS VIBRATION SENSOR WIRING INSTRUCTION

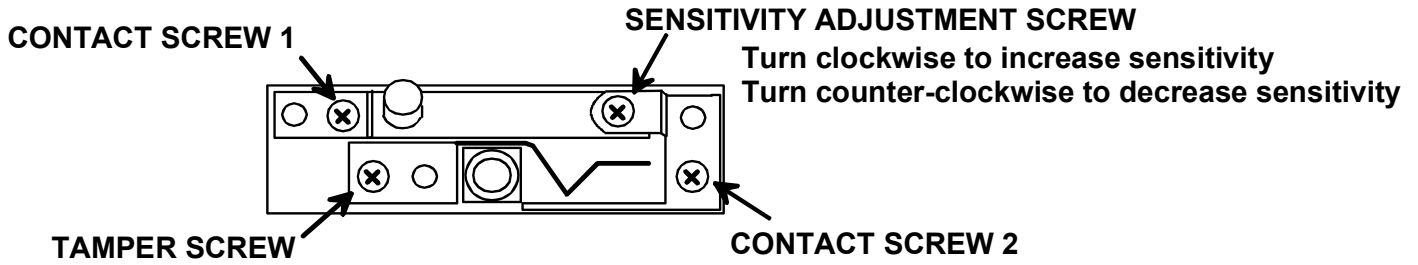


ENVIROMUX-VSS (View with cover removed)



Schematic for wiring Vibration Sensor to DIGITAL IN Terminals

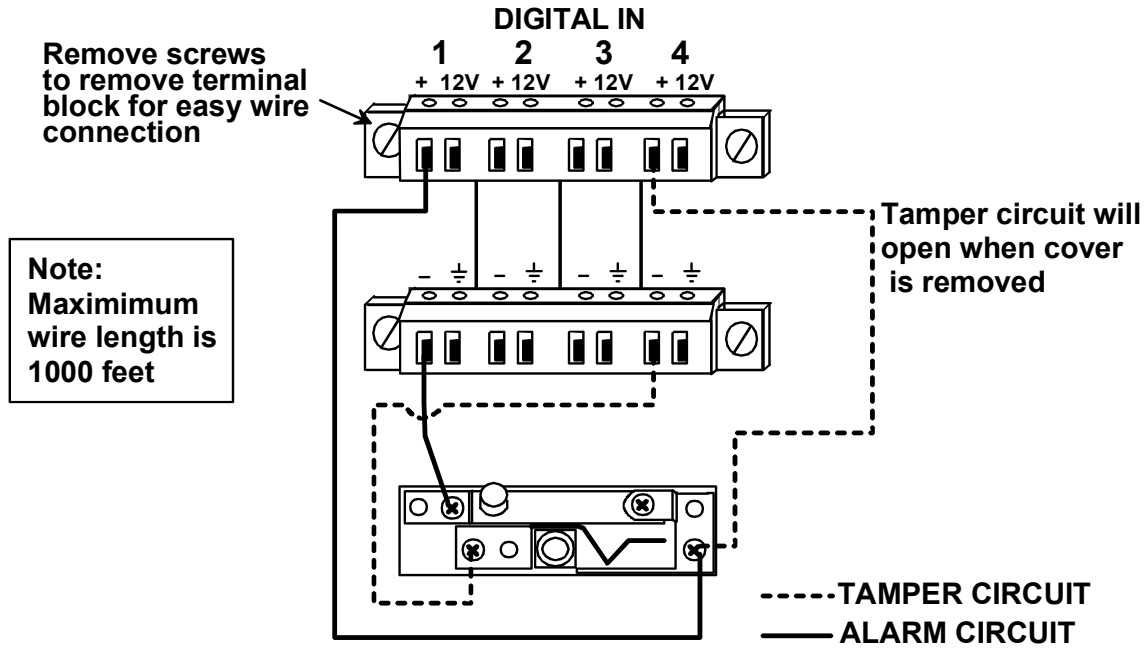

Schematic for wiring Vibration Sensor to RJ45 Socket

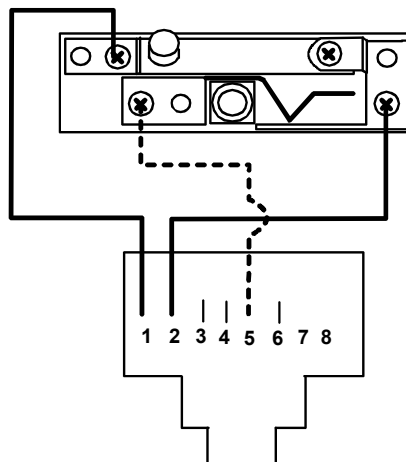

View looking into RJ45 Socket